



ALFA AX5GRM 5GNR Global Band Wi-Fi 6 Router Installation Guide

[Home](#) » [ALFA](#) » ALFA AX5GRM 5GNR Global Band Wi-Fi 6 Router Installation Guide 



AX5GRM
Quick Installation Guide

Contents

- 1 Package Contents
- 2 Interface and outline
- 3 How to Login to Setup
- 4 How to setup Internet
- 5 How to Setup wifi
- 6 How To Setup LAN
- 7 How to Setup Admin/User password
- 8 How to reset device to default setting
- 9 FCC Statement
- 10 Documents / Resources
 - 10.1 References

Package Contents


1. AX5GRM Indoor CPE x1




4. Power adapter 12 V/2 A x1




2. 4G/5G Antenna x4

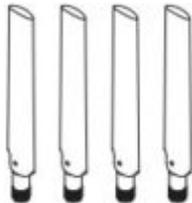


5. QIG x1

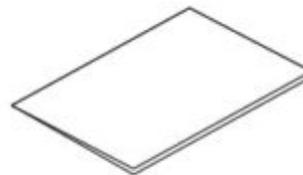


3. WiFi6/7 Antenna x4

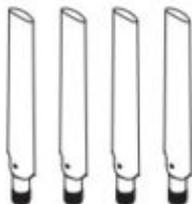


Interface and outline

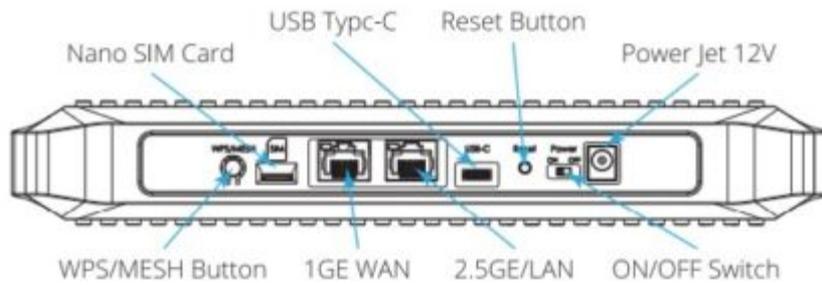


WiFi Antenna and RSMA connector

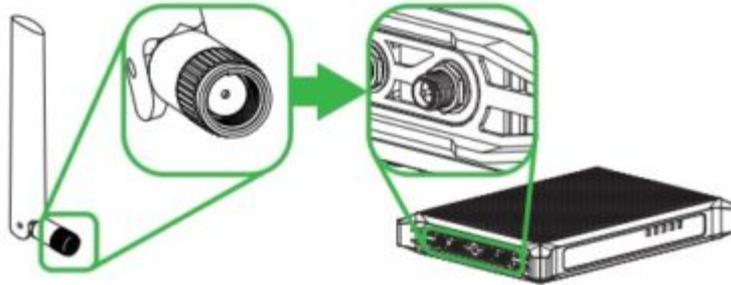

5GNR/4G LTE Antenna and SMA connector

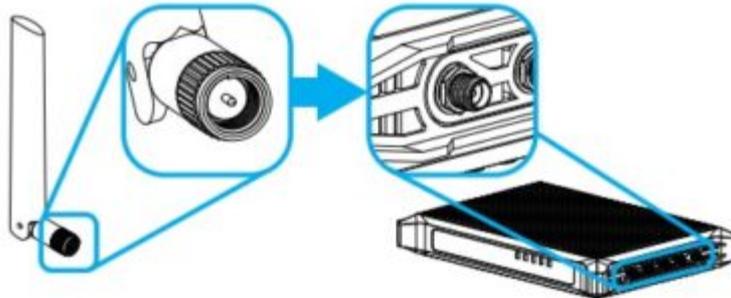

CPE LED Indicate

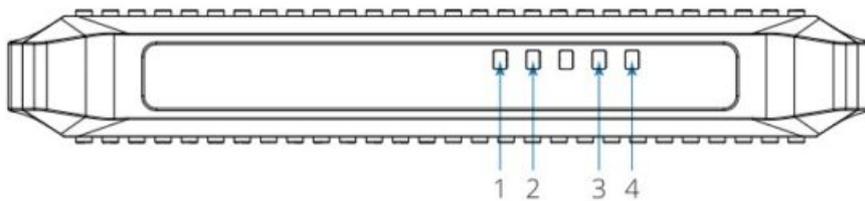

Item	LED Indicator / Interface	Descriptions
1	Power Indicator (Blue)	On – Power on Off – No power
2	Internet (Blue)	On – Internet Online Off – No Internet Access
3	WIFI (Blue/Green)	On – WiFi On (Green) Blinking – WPS processing (Blue)
4	SIM card(Green)	On – With SIM card Off – Without SIM card


How to Login to Setup

Open web browser and key in <https://192.168.63.1>




Account: admin
 Password: ALFASG

If log in successful, will into Dashboard to check device status

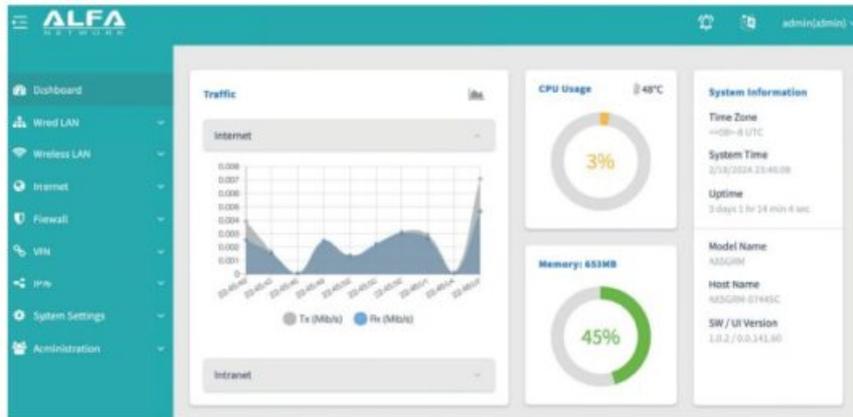


If you want to check AX5GRM connect to 5GNR or not, please go to Dashboard->Find 5G_NR icon and press **more...** button.

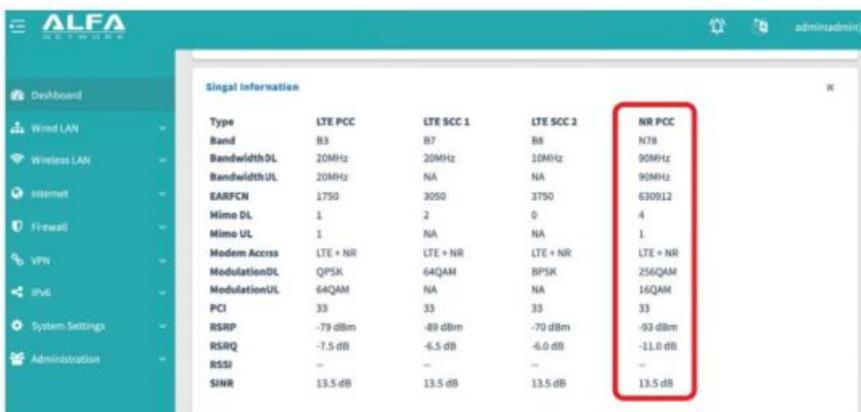


When Dashboard Signal Information showed NR PCC Band info means AX5GRM connect to 5G NR successful.

How to setup Internet

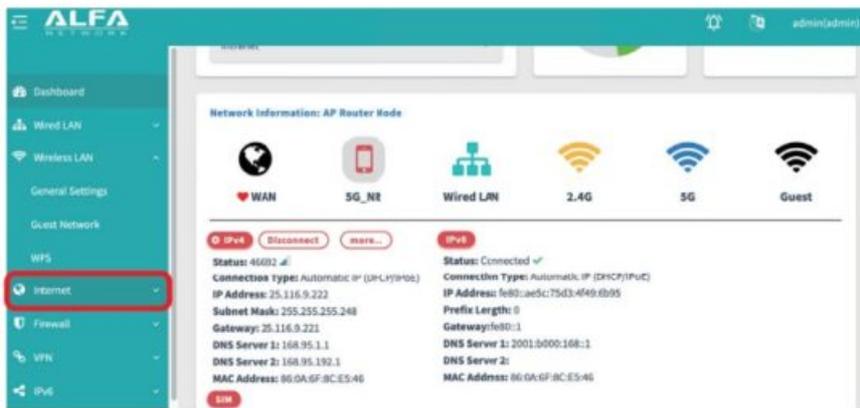


When you insert valid and unlock SIM card from Telkom, the device will auto connect to Internet without setting. If special Telkom SIM card need to set APN, you need to go to Internet item to setup it

Please go to Internet->IPv4->5G_NR press setting icon  ->APN Setting ->press edit icon  to edit the parameter when ready, please press "Save" button and Return to front page, press "Apply" button to effect the setting.

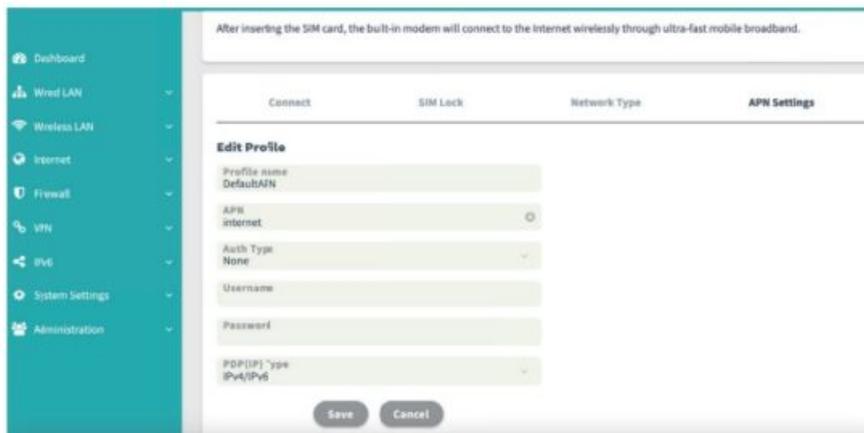


PS. If you want to use Wired WAN(Fixed line ex FTTH, xDSL), please go to WAN item to set up it. The device default WAN it 5GNR/4G LTE (Mobile)WAN.


How to Setup wifi

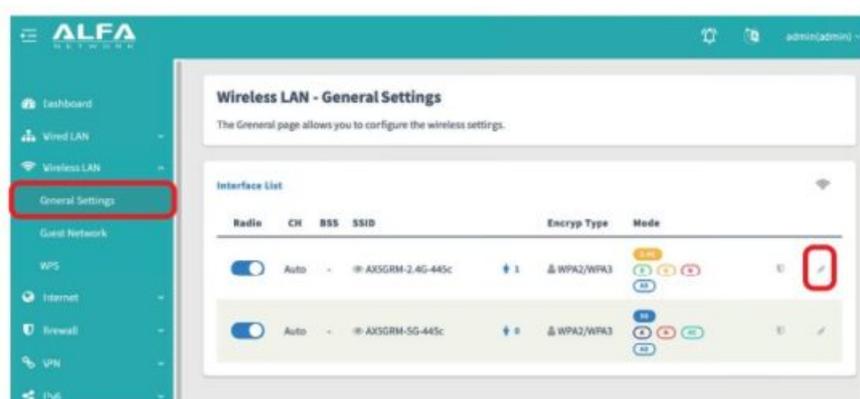

Device with system default WiFi SSID (AX5GRM-2.4G-XXX and AX5SGRM-5G-XXX) and default password (12345678) both on WiFi 11AX 2.4 GHz and 5 GHz. If you want to change your own SSID (WIFI Name) and password, please go to Wireless LAN->General Settings->press edit icon  to set up.

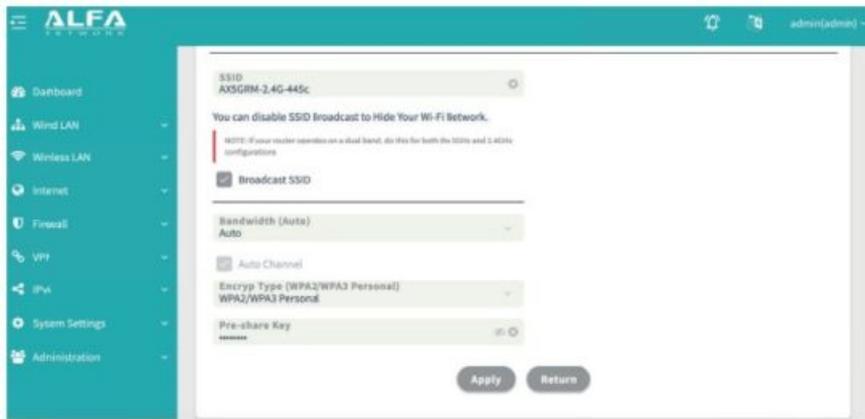


When set up your own SSID(WIFI Name), please press Apply to save and effect the setting.

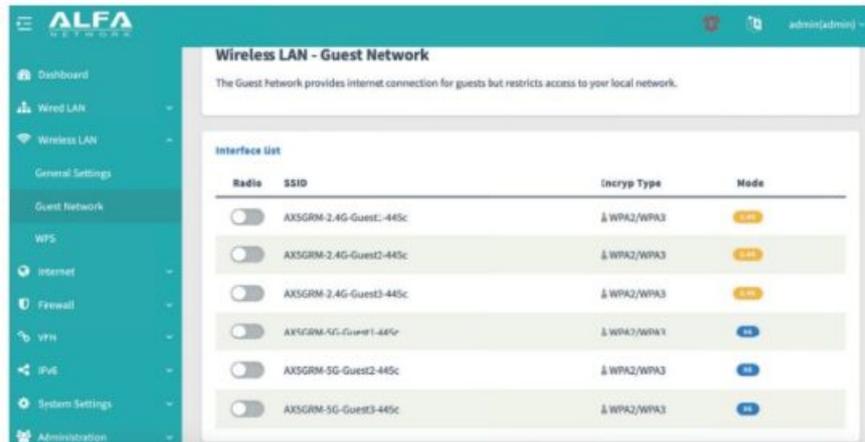


If you want to setup guest WiFi, please go to Guest Network items to enable the "Radio" and edit the guest SSID and password. AXSGRM provides 3 SSIDs for 2.4 GHz WiFi and 3 SSIDs for 5 GHz WiFi for guest WiFi networks.

How To Setup LAN

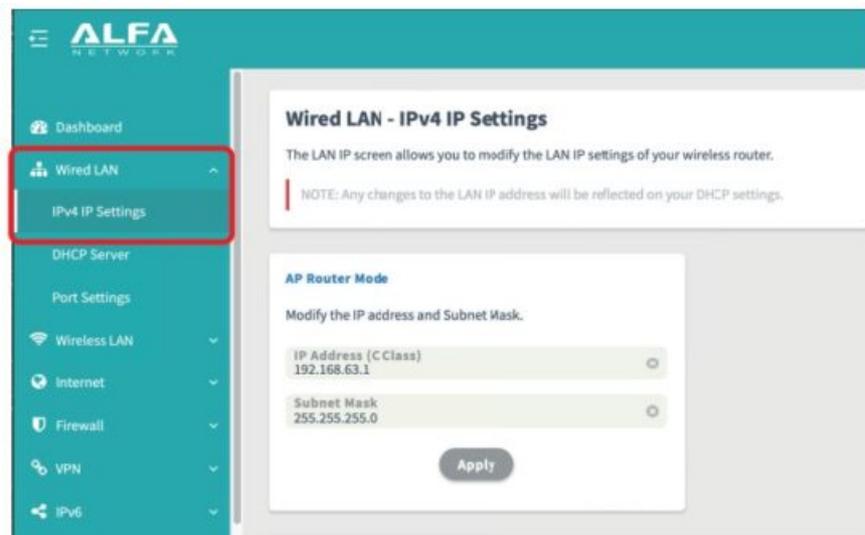

The device default LAN IP address setting is 192.168.63.X, default gateway is 192.168.63.1. If you want to change LAN IP setting, Please go to Wired LAN->AP Router Mode and change the IP Address, when you set up ready, please press Apply button.


How to Setup Admin/User password

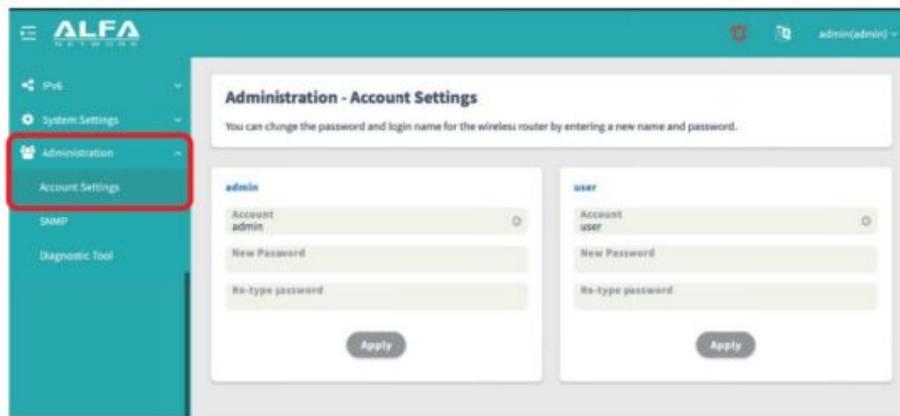

If you want to change login user name and password, please go to Administration-> Account Settings item to set admin(Super user) and user S (Guest) Account user name and new password. When set up ready, please press Apply button.

How to reset device to default setting

If you want to reset the AXSG RM to factory default setting, please remember to back up the current setting before reset to default, press **Backup Current Setting** button to save to setting file and you can upload the setting file when needs.

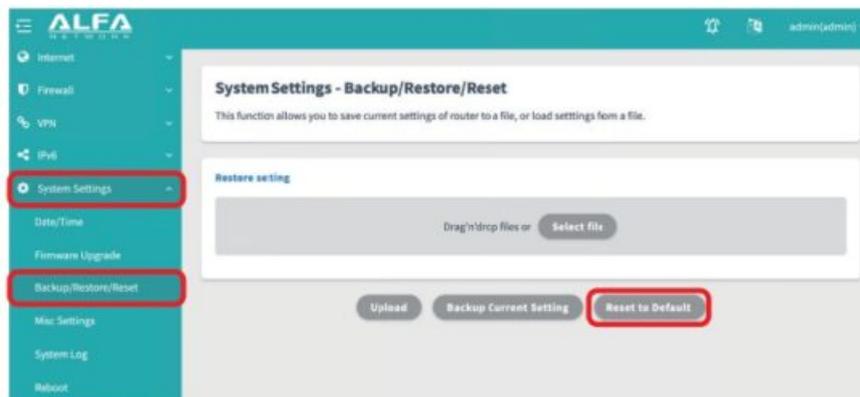

If you want to reset the AX5GRM to factory default setting, please go to System Setting -> Backup/Restore/Reset item. Press Reset Default button. System will process 2 minutes to reset the whole device to default setting.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co – located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This device complies with Innovation, Science and Economic Development Canada Compliance licence-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.



www.alfa.com.tw

Documents / Resources

	<p>ALFA AX5GRM 5GNR Global Band Wi-Fi 6 Router [pdf] Installation Guide AX5GRM 5GNR Global Band Wi-Fi 6 Router, AX5GRM, 5GNR Global Band Wi-Fi 6 Router, Global Band Wi-Fi 6 Router, Band Wi-Fi 6 Router, 6 Router</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.