



# DIREKTRONIK

Fault analysis:


1. Mix

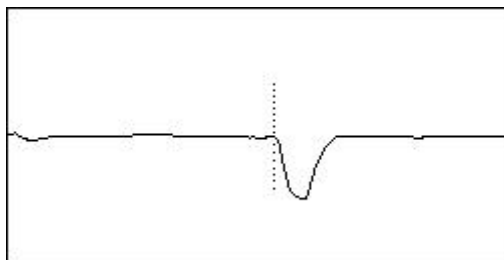


2. Break:

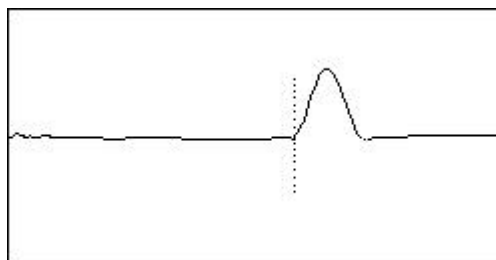


2. Disconnection of Shielding layer

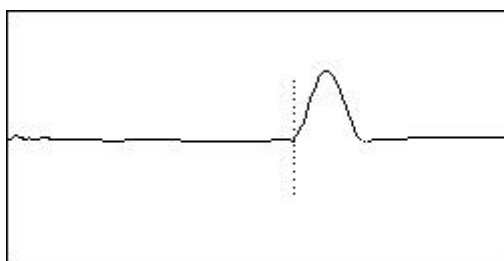


4. Induction coil:

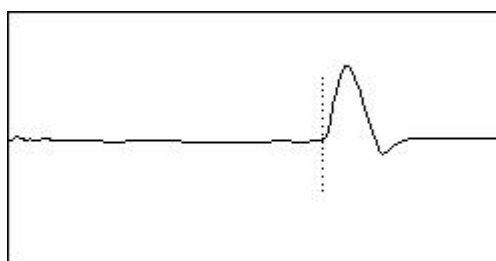


5. earthing fault:

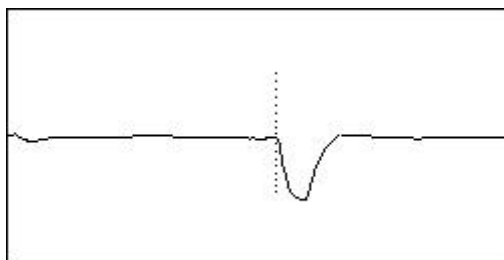

6. Immersion:

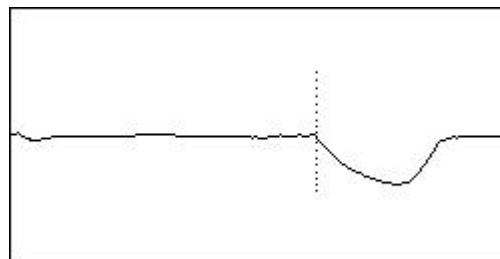

7. Cross:

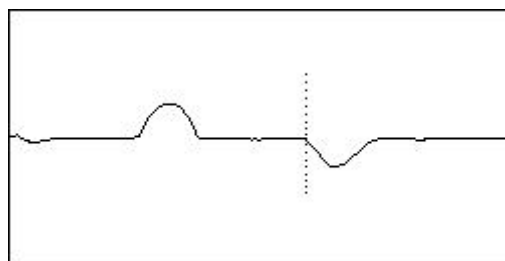

# DIREKTRONIK

Direktronik AB tel. 08-52 400 700 [www.direktronik.se](http://www.direktronik.se)