




SE



NO

1 INSTALL THE READER

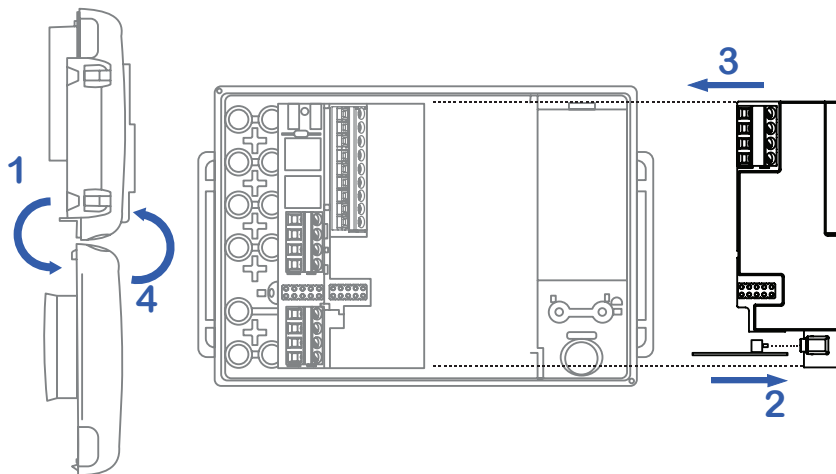

1) Open Multical meter housing

2) Connect antenna


3) Install Multical Reader into the expansion module slot.
 - Lock it in place

4) Close Multical meter housing
 - Use dedicated wire outlets, if necessary



WARNING:

Do not apply power before connecting the antenna!

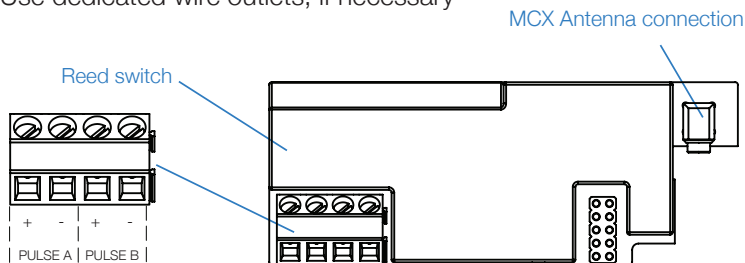

2

SWITCHING ON

The device should automatically start once the meter housing is closed. If it does not, activate it with 1 second magnet touch on the meter housing where the reed switch is on the reader card.

- * The sensor starts to initialize and the the buzzer beeps once and then starts to beep in short intervals.
 - If the sensor failed to initialize the buzzer will do a longer beep.
- * The sensor tries to register to network and the buzzer keeps beeping
 - If it failed to join, the buzzer will do a longer beep
- * If the network join was successful, the buzzer will do a series of fast beeps

3

TROUBLESHOOTING

If the device did not register to the network, it can be for 2 reasons:

- The device is not allowed in the network and it must be registered with the service provider. The necessary data is on a separate sticker in the package or provided electronically with your order (DevEUI, AppEUI, AppKey). Once the device is registered repeat the switching on procedure.
- There is no LoRaWAN reception. Contact your LoRaWAN service provider.