

PowerWalker DC SecureAdapter 12V


1. Package Contents

You should have received the following items inside of package:

- DC UPS adapter unit
- Quick Guide

If anything is missing or damage in the package, please contact your dealer.

2. Product Overview

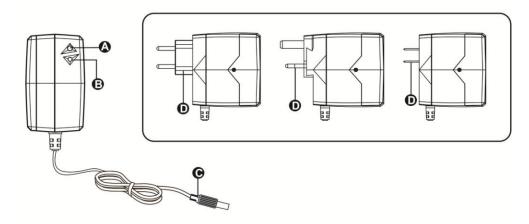

- A Restart/Off Button
- B LED indicator
- C DC output connector
- D AC input

3. Installation and Operation

NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. Remove the foil protecting the battery during storage.


Connect to Utility and Charging

Plug in the AC input plug (D) to the wall outlet. The UPS will be automatically turned on and green LED will light on. If battery is not fully charged, the UPS will auto charge battery and green LED will flash.



Connect the Loads

Plug in the loads to DC output connector (C) of the UPS. Then, connected device will be protected by UPS unit.

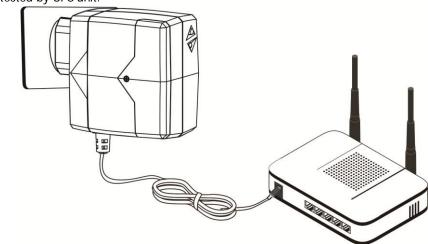

LED Indication

This LED is two-color indicator: green or red color depending on operation status.

Status	Color	On/Flash
Power on with battery fully charged.	Green	On
Power on with charging battery.	Green	Steady Flash
UPS is on but power failure occurs. UPS will transfer to DC	Green	Quick Flash
mode and battery is discharging.		
Any fault occurs on UPS.	Red	On

4. Applications

The DC UPS is designed to provide emergency power backup to all kinds of DC-powered equipment such as routers, modems, set-top box, VOIP phone systems, surveillance system, alarm system, access control system and many critical telecomequipment.

5. Important Safety Warning (SAVE THESE INSTRUCTIONS)

To safely operate this DC UPS, please read and follow all instructions carefully. Read this manual thoroughly before attempting to unpack, install, or operate. You may keep this quick guide for further reference.

CAUTION! Do NOT place this unit under the hot and humidenvironment.

CAUTION! Do NOT disassemble this product.

CAUTION! If the battery level is low, please recharge battery immediately.

CAUTION! When install or replace a new battery, be sure positive (+) and negative (-) are correctly connected. Otherwise, DC UPS will be damaged.

5. Trouble Shooting

Use the table below to solve minor problems.

Problem	Possible Cause	Solutions
	Overload or short circuit occurs on UPS and UPS transfers to fault mode.	Press button for more than 1 second and release to restart unit.
Battery backup time is shorter than nominal value.	Battery is far too low.	Contact your dealer to replace the special battery.
No output and LED indicator is not on.	Internal fault has occurred.	Contact your dealer.

6. Specifications

pecifications		
AC INPUT		
Voltage Range	90 VAC ~ 264 VAC	
Frequency	50 or 60 Hz	
DC OUTPUT		
Voltage	12VDC ± 5%	
Max. Power	25W (2.1A)	
BATTERY		
Туре	Lithium-ion Battery	
Nominal Voltage	3.7VDC	
Capacity	2600mAh	
Typical Charging time	3 hours recover to 90% capacity	
PHYSICAL		
Input Plug	Type C (Schuko, French compatible)	
Output cable	1m Length (DC Male Jack, OD 5.5mm, ID 2.5mm)	
Dimension, D X W X H (mm)	68 x 42 x 74	
Net Weight	200g	

7. Approximate Back-up Time Table

Load	Backup Time @ 12Vdc (min)
12V/1.0A Router	150
12V/1.5A Router	120
12V/2.0A Router	90